


**STYLE
TV-1070-G
for RG-59
Cable**




**Installation
Instructions**

1. Strip the coax's insulation by $3/4"$. Expose $1/2"$ of its center conductor, leaving $1/4"$ of its braid as illustrated.



2. Push back and twist the braid around the dielectric until it butts against the cable jacket.

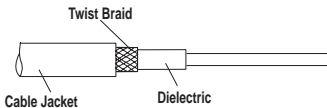

4. Screw the F-connector onto the cable jacket until the dielectric butts against the inner retaining ring. Cut the center conductor flush with the end of the connector.

